

						<b>Iromat V</b> max. 840m PE-pipe tray left	<b>Iromat V</b> max. 670m PE-pipe tray right	<b>Iromat V</b> max. 650m PE-pipe tray right
						<b>Iromat IV</b> max. 700m PE-pipe tray right	<b>Iromat IV</b> max. 550m PE-pipe tray left	<b>Iromat IV</b> max. 530m PE-pipe tray left
						<b>Iromat IV RED</b> max. 600m PE-pipe tray left	<b>Iromat IV RED</b> max. 560m PE-pipe tray left	<b>Iromat IV RED</b> max. 430m PE-pipe tray right
						<b>Iromat III</b> max. 600m PE-pipe tray left	<b>Iromat III</b> max. 550m PE-pipe tray left	<b>Iromat III</b> max. 500m (450m) PE-pipe tray center (PE-pipe tray right)
						<b>Iromat III RED</b> max. 550m PE-pipe tray left	<b>Iromat III RED</b> max. 510m PE-pipe tray left	<b>Iromat III RED</b> max. 400m PE-pipe tray right
							<b>Iromat II TD S</b> max. 420m (390m) PE-pipe center (PE-pipe tray right)	
						<b>Iromat II TD</b> max. 550m PE-pipe tray left	<b>Iromat II TD</b> max. 500m PE-pipe tray left	<b>Iromat II TD</b> max. 370m PE-pipe tray right
						<b>Iromat II FLAT</b> max. 550m PE-pipe tray left	<b>Iromat II FLAT</b> max. 500m PE-pipe tray left	<b>Iromat II FLAT</b> max. 370m PE-pipe tray right
						<b>Iromat II RED</b> max. 430m PE-pipe tray right	<b>Iromat II RED</b> max. 400m PE-pipe tray right	
						<b>Iromat I</b> max. 440m PE-pipe tray left	<b>Iromat I</b> max. 400m PE-pipe tray left	<b>Iromat I</b> max. 300m PE-pipe tray right
						<b>Iromat I RED</b> max. 300m PE-pipe tray left		
						<b>Iromat Sport</b> max. 160m PE-pipe tray right		
50	82	90	100	110	120	125	135	140

PE-pipe diameter in mm

Note: The PE-pipe support is indicated in the direction of travel of the machine.